

Using the JB-199 Karaoke Jukebox

Setup (all power buttons OFF - all volume levels turned DOWN!) Plug in power to all units.

- 1) Connect Blue or Purple **Video RCA cable** from either yellow **VIDEO OUT jack** on Jukebox (top yellow jacks) to the yellow **VIDEO IN jack** on the rear of the TV Monitor. (Be careful NOT to plug into the VIDEO IN jack on the Karaoke machine!) Turn the TV monitor "ON". *If you are using your own TV, Make sure your TV source/input is set to "AUX IN", "VIDEO IN" or "LINE IN". Most TVs will either have an input/source select button on the front panel, or on the remote.* At this time your screen will be blank.
- 2) Connect the RCA end of the black **RCA to XLR cable** to any one of the white or red **audio output RCA jacks** on the rear of the karaoke machine (just below the yellow video jacks). If you rented two speakers, connect one cable to either red jack and the other cable to either white jack for stereo. The XLR end of the cable gets plugged in to the rear of the powered speaker into the **IN1/CH1 jack**.
- 3) Connect the microphones to the front of the player using the **1/4" to XLR cables** supplied with the unit. The XLR end plugs into the bottom of each microphone. The 1/4" end plugs into the jacks on the lower left front of the unit. Adjust the volume and echo of the microphones with the volume and echo knobs located just to the right of the mic jacks. Be sure to switch the microphones "ON" (if they have a switch) using the switch found on the side of each mic. "ON" is the position toward the ball of the mic (again, only if your mics have a switch).
- 4) Turn the Jukebox power ON by pressing the white power button (upper left corner). The display will read "Digital Jukebox Power ON". **NOTE: It usually takes 1-2 minutes for the Jukebox to boot its internal hard drive.** During this time, turn the power "ON" on the powered speaker(s). **NOTE: Make sure the volume is turned all the way down on the powered speaker BEFORE turning it on.** (Once the system is on you can adjust the volume to a comfortable level).
- 5) Once the Jukebox has booted up its hard drive, "Mike's DJ & Karaoke" and "Select Song Number" should appear on your TV screen. If you do not see anything, go back to step 1 and double check your TV settings and connections! You can call 239-710-1200 for technical support if needed.



Male RCA Plugs



XLR Connectors



1/4" Plug

**Power On/Off
Button**

**Microphones
Plug In HERE
and HERE**

**Microphone Volume
Controls**

**Microphone
Echo/Reverb
Control**

 


JB-199 Power & Mics (Front Panel, Left Side)

Video to TV Goes HERE or HERE

Nothing Goes Here


**Audio to
Speaker(s)
Goes into
Any of These
FOUR
Jacks**

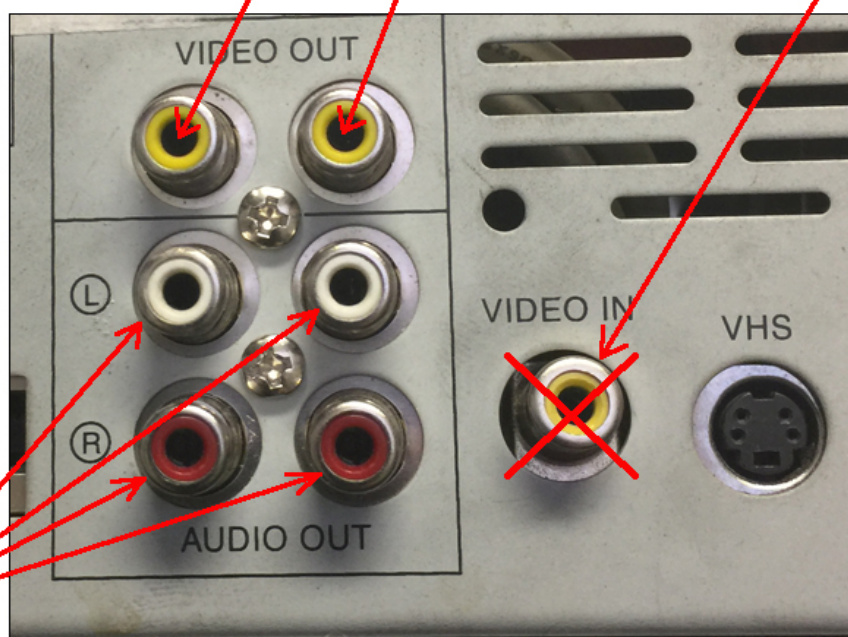

JB-199 Rear Jacks



 JBL Eon 610 Powered Speaker – Rear Panel

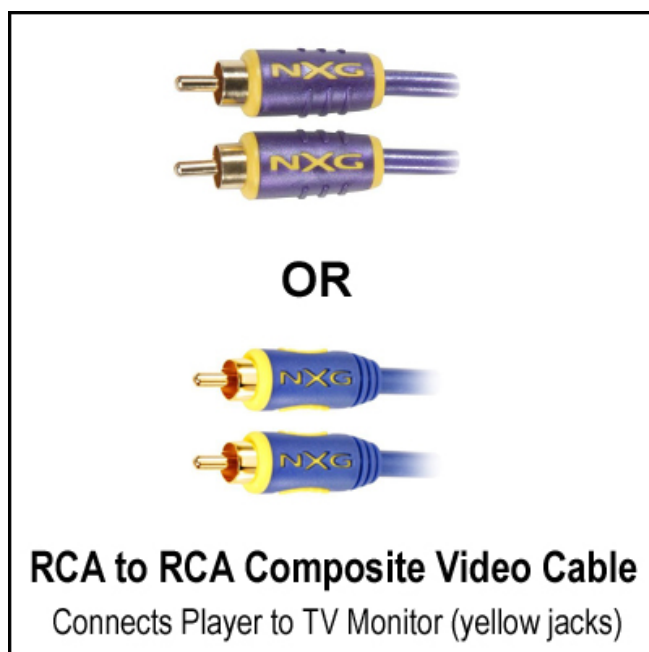




Power Goes
HERE

Nothing in Any
These Jacks

 Composite Video Cable
From Player Goes HERE

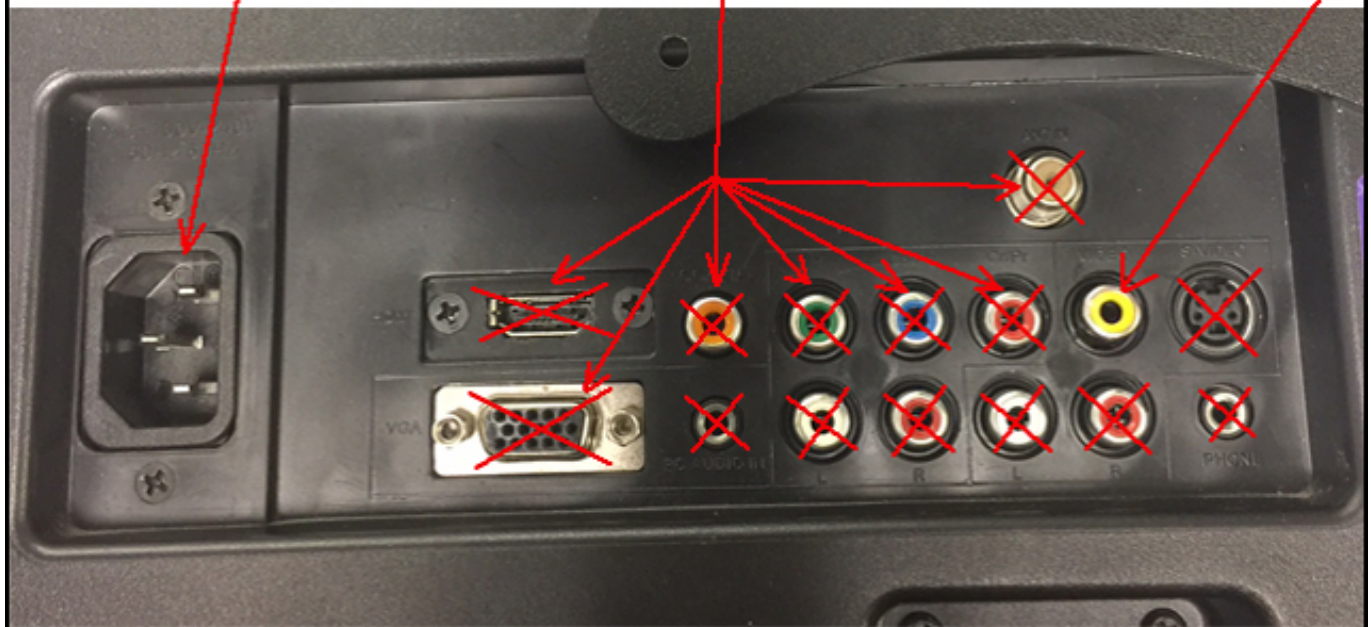

Connection Area on Rear of TV Monitor



Operation

- 1) Enter a song number from the song list using the numeric buttons, then push the START button to begin play. The STOP button will stop playback and clear the song.
- 2) You can adjust your mic volume and echo using the adjustment knobs on the front of the unit. Key control and tempo can be adjusted using the KEY and TEMPO buttons located on the front panel just above the mic control knobs.
- 3) If desired, you can program the next song while someone is singing by entering the song number and pressing the PROG button. The song title will appear in the cue at the top of the screen, and will play when the current singer is finished.
- 4) Please do not attempt to use the buttons marked JB/CD, BGV, VOCAL, LIST, or MENU unless instructed by a technician as they may interfere with the proper function of the unit.
- 5) The **song listings** are accessed through our website at: www.mikesdj.com. They can be accessed in a number of different ways, but the two most common are: 1) On the "Home" page of the website, click on the little purple microphone at the top right area of the page. This icon will jump you directly to the song listings page. 2) At the bottom of this document (*scroll down*) you will find a page with a QR Code. Scan the QR Code with your smartphone or tablet. This will also take you directly to the song listings page. Note: You can also print the QR Code page and distribute it to your guests if desired for convenience.

WARNINGS (PLEASE READ CAREFULLY)

- 1) DO NOT hold the mic too close to the speaker or you may experience a feedback squeal. This could damage the speaker - REMEMBER: If you break it, you bought it. The powered speakers cost \$800.00 each.
- 2) DO NOT drop the mics or pull on the cable. We know it is “cool” for rappers and rock stars to “Drop the Mic”... Of course, they can afford to buy a new mic for every song! The microphones are fragile! When you get your system, check that the mic screens are not dented - if you bring them back dented you will be charged \$100 and you will own the microphone! Also, always coil the cable neatly - never kink the cable. And please, NEVER swing the mic from the cable! We like Elvis too... But you are not Elvis!!! ☺
- 3) DO NOT SCREAM, hit or clap your hands into the mic. This can damage the speakers. Don’t forget: If you break ‘em.... well, by now you should get the idea!
- 4) When removing RCA cables - NEVER wiggle them off!!! This will break the jack! Gently twist while pulling straight out from the jack.
- 5) If you choose to use your own TV rather than rent ours, and you cannot get the menu on your screen, you ARE NOT entitled to a refund - don’t even ask. Use your own TV at your own risk. Usually our techs can talk you through using your TV if you can’t figure it out yourself, but if they can’t..... Please don’t try to blame us.... We want you to have fun!
- 6) Please remember that the Jukebox is a \$4200.00 piece of equipment. Children should be instructed by an adult as to its proper use and/or supervised during its use.
- 7) DO NOT attempt to connect the Jukebox to your computer or a network. You cannot access the music files with a normal computer. If you try, you could severely damage the unit. The song files are coded to the drive and registered for use in this machine only. The song files cannot be copied without destroying them.

PLEASE NOTE: Your rental is fully tested *twice* before you receive it – once when it was returned from the previous rental, and once right before you checked it out. It is being given to you in perfect working condition. If you notice any damage, have your salesperson make a notation on your contract prior to leaving otherwise you will be charged if the equipment is damaged or does not function upon return. If you have any questions regarding the operation of the unit, ask them before you leave – although you can always call during business hours for tech support, once we are closed you are on your own...

The music contained in this machine is provided at no charge for promotional use only. These songs, along with thousands of additional titles, are available for purchase in MP3+G and CD+G format.

Scan this QR Code for Song Listings



- OR -

Open a browser and go to

www.mikesdjkj.com

On the home page, click on the little green microphone in the upper right area of the page.



Very Important:

Please **DO NOT** swing the microphone by its cable, or “drop” the mic!
Doing this could seriously damage the microphone!